


AUTOMATIC X2 SCHEMATIC AND PARTS LIST

#9557UL AUTOMATIC X2 - White/Gray

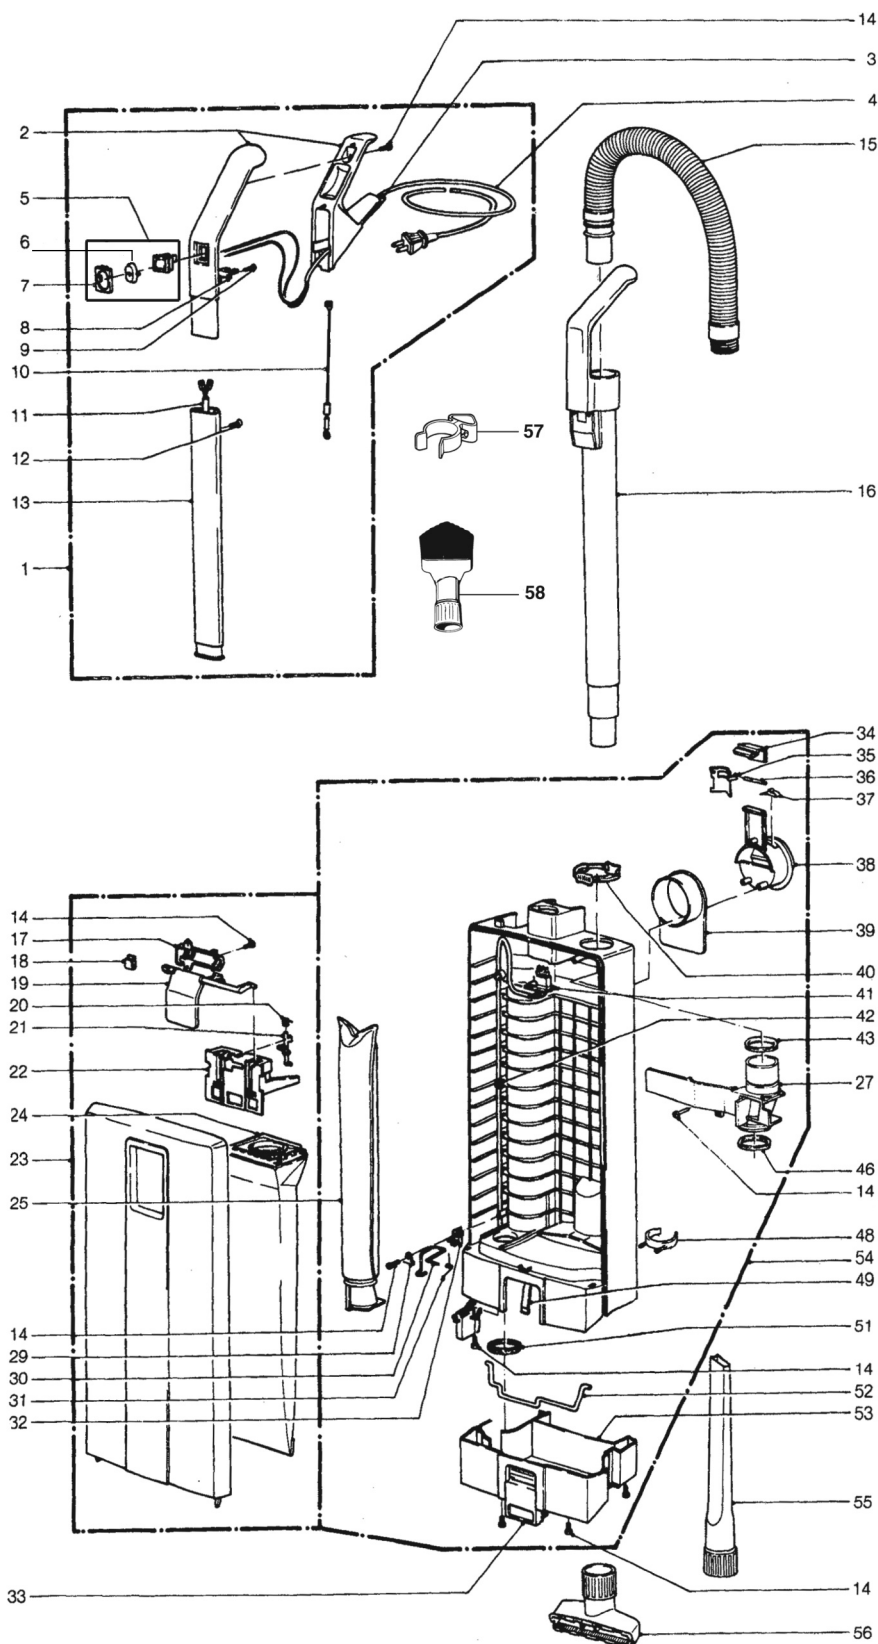


Bag Housing with Handle

#9557UL X2 White/Gray Machine

Pos.	Part #	Description
1	5632CA	Handle complete
2	5297GSAM	Handle grip (incl. pos. 3, 7 + 10)
3	5359GS1	Grommet
4	5433DG	Power supply cord
5	05113	Switch (incl. pos. 6 + 7)
6	5160HG	Switch cap - light gray
7	5161GS	Switch cap holder
8	5162	Cable clamp
9	0103	Screw C 3.9x16 DIN 7981
10	5253UL	Wire-antistatic
11	5298ER	Handle cable
12	0129	Screw M 4x12 DIN 966
13	5187	Handle tube
14	0102	Screw F 3.9x13 DIN 7981
15	5040SB	Hose
16	5045GS	Cleaning wand
17	5307	Cover
18	5319	Bag holder spring
19	5306DG	Cover release
20	5091	Safety catch spring
21	5360	Safety catch
22	5324	Bag holder cpl. (incl. pos. 20 + 21)
23	5805SE	Front cover cpl. (incl. 5454 front cover seal)
24	5093AM	Ultra filter bag
25	5036AM	Pre-motor microfilter
27	5380GS	Internal cover complete (incl. pos. 43 + 46)
29	1073	Clamp
30	5208	Filter safety catch
31	5210	Return spring
32	5164	Cable clamp
33	5082GS1	Bag housing locking catch
34	5098DG	Lock catch
35	5099	Handle lock plate
36	0187	Lock pin
37	5146	Stop spring
38	5145HG	Carrying handle
39	5144HG	Cable hook
40	5424GS1	Retaining ring
41	5299ER	Internal cable
42	5266	Cable clamp
43	5842	Seal
46	5289	Seal
48	1823GS	Attachment clip
49	5084	Spring for locking rod
51	5163	Seal
52	5083	Locking rod
53	5085DG	Bag housing bumper base
54	5214HG	Bag housing, complete
55	1092GS	Crevice nozzle
56	1491GS	Upholstery nozzle
57	5460GS	Mounting clip with screw
58	1387GS	Dusting brush

AUTOMATIC X2 SCHEMATIC AND PARTS LIST

#9557UL AUTOMATIC X2 - White/Gray

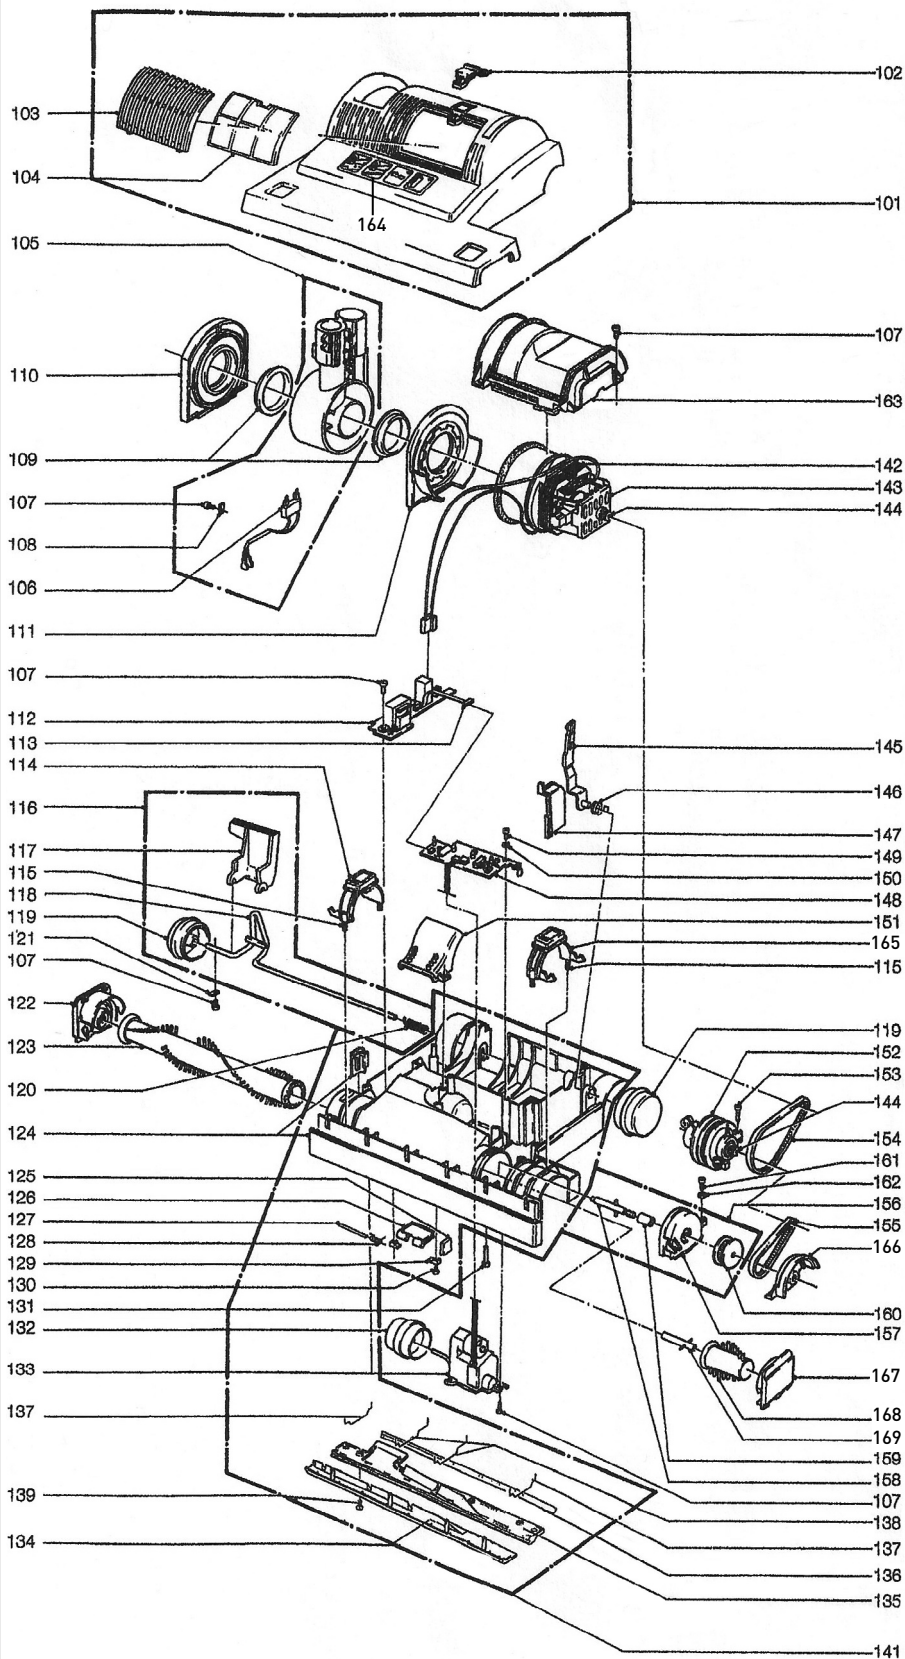

Power Head

#9557UL X2 White/Gray Machine

Pos.	Part #	Description
101	5492SE	Power head cover cpl., X2
102	5008GW	Exhaust filter catch
103	5007GW	Exhaust filter cover
104	5143	Exhaust filter
105	5175UL	Swivel neck assembly (incl. pos. 106-108)
106	5176UL	Male contact holder
107	0102	Screw F 3.9 x 13 DIN 7981
108	2494	Cable clamp
109	5101	Swivel neck bearing
110	5178	Swivel neck support r. h.
111	5177	Swivel neck support l. h.
112	5850ER	PCB 12 V power supply incl. #148 Computer Controller
113	5205/1	Ribbon cable
114	5102GW	Brush roller release
115	5103	Spring
116	5051GS	Axle, assembly cpl. (incl. pos. 117-120)
117	5059OR	Foot pedal - orange
118	5053	Axle
119	5819GS	Wheel, complete
120	2010	Axle spring
121	2014	Axle clamp
122	5031WE	Bearing block right hand
123	5290AM	Brush roller, X2
124	5230GS	Bumper Set, X2
125	5155GS	Rubbing plate
126	5172OR	Access door (incl. pos. 127, 128)
127	5303	Access door axle
128	5304	Access door spring
129	5154GS	Hinge
130	0100	Screw C 2.9 x 9.5 DIN 7981
131	0176TL	Screw AM 4 x 30 DIN 7985 TL
132	5174GS	Pile adjustment wheel
133	5060ER	Servo motor with gear box
134	5413GS	Front bottom plate, cpl., X2
135	5414GS	Rear bottom plate, cpl., X2 (incl. pos. 136, 139)
136	5400-2	Sealing strip, X2
137	5401	Wire tie
138	5402	Wire tie - inner
139	0197	Screw M 4 x 12
141	5321GS	Chassis, cpl., X1
142	5211UL	Vacuum motor 850 W 120 V
0511/1		Carbon brush set / vac motor
143	5100	Rubber mounting
144	5117/1	Sensor pulley
145	5129	Support lever
146	5107-1	Support spring
147	5112SW	Motor pulley cover
148	5850ER	Computer controller incl. pos. 112
149	0107	Screw C 2.9 x 13 DIN 7981
150	0143	Washer 3.2 DIN 125
151	5173SW	Cover for air channel
152	5383	Sensor, X2
153	0104	Screw C 3.9 x 25 DIN 7981
154	5379	Belt 312 3M-HDTII-6
155	5110	Belt 219 3M HDTII-6
156	5767HG	Bearing block l.h., cpl., X2 (incl. pos. 157-160)
157	5767HG	Bearing block l.h., X2 (incl. in pos. 156)
158	5767HG	Drive shaft cpl., X2 (incl. in pos. 156)
159	5767HG	Bushing (incl. in pos. 156)
160	5767HG	Clutch (incl. in pos. 156)
161	0103	Screw C 3.9 x 16 DIN 7981
162	0141	Locking washer
163	5018UL	Motor cover
164	5421DG	Display - dark gray
165	5239DG	Brush cover release - gray/white
166	5244HG	Seal bearing
167	5249GW	Brush cover
168	5250	Edge brush
169	5246	Shaft extension, complete